

WATERWARDEN™

POOL SAFETY PRODUCTS

YOU CAN'T AFFORD NOT
TO HAVE ONE!™

To activate 5 year limited warranty, register within 10 days of purchase at
www.thewaterwarden.com
or return completed warranty form on back page to:

Water Warden™ Pool Safety Products
4837 NE 12th Ave
Oakland Park, FL 33334

Water Warden™ Pool Safety Products

Safety Net Installation Instructions for above ground and on-ground pools

Please read these instructions in their entirety before beginning.

The Water Warden™ Safety Net can be applied to most above ground pools. The basic installation instructions are for any pool without any steps, ladders or decks. For a pool with any of these features, or for on-ground pools, please see additional information on page 3 of these instructions. If you are unsure as to whether or not your particular pool can hold a Water Warden™ Pool Net, please call 1-877-402-SAFE, Monday-Friday, 8:00 AM to 5:00 PM for help before you begin.

Necessary Equipment:

Drill

9/64" Drill Bit

Extension Cord

Black magic marker (nonpermanent)

Lighter (for pool with ladder or steps)

Sharp scissors or knife (for pool with ladder or steps)

Included Components:

1 Water Warden™ Pool Net with Tensioning System

Brackets

Hooks (already attached to net)

Drilling template

ASTM Tags (already attached to net)

Extra 3.5mm binding cord

PLACING THE BRACKETS:

- (1) Removing drilling template from package. Determine the width of pool's top rail, and cut template on the appropriate dotted line.
- (2) Align drilling template with top of any pool upright, directly underneath top rail cap. Using a nonpermanent magic marker, mark the two spots labeled "drill here".
- (3) Repeat step (2) for each upright.
- (4) Drill through marked spots into each upright.
- (5) Place a bracket onto the first drilled upright, with round screw hole on the bottom, and keyhole for hook at the top. (*See Fig. 1*). Use the stainless steel screws provided to attach bracket to upright. For best results, use a drill with speed control to prevent over-tightening of screws.
- (6) Repeat step (5) with remaining brackets and screws, attaching one bracket to each upright with the provided screws.
- (7) Unfold the Water Warden™ Safety Net and spread over top of the pool. Proceed around the pool and clip each hook into its respective bracket.
- (8) Locate tensioning device at center of Water Warden™ Safety Net. The Tensioning Cord is pre-threaded through the pulley system. The ends of the Tensioning Cord are tied to the edges of the Water Warden™ Safety Net. Untie the ends of the Tensioning Cord. Make sure that the two ends of the cord cross one another at an angle of 90°. Attach one Tensioning Cord hook into the closest bracket (use second keyhole on the bracket to fasten this hook). Pull opposite end of the Tensioning Cord taut, and clip the second tensioning hook into its closest bracket. This should provide even tension for the Water Warden™ Safety Net System, to keep the Water Warden™ Safety Net suspended well above the water line.

NOTE: Water level should always be maintained correctly in accordance with pool manufacturer's instructions to ensure safety. Refer to Pool Owner's Manual to determine correct water level.

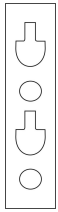


Fig. 1

FOR POOLS WITH LADDERS OR STEPS:

Ladder or steps must be placed in between any two uprights. Follow the instructions above for drilling and installing the brackets onto the uprights. Place the net over the pool and attach each hook into its bracket, except for the hooks on each side of the ladder or steps.

You will now cut the net around the ladder to fit. Using a sharp scissors or knife, cut the net square by square, as close to the ladder or steps as possible. Use a lighter to heat-seal any cut edges of netting to ensure that it will not unravel. Place the two remaining hooks into their respective brackets.

Locate the extra 3.5mm binding cord included in the installation kit. Using a permanent fisherman's knot, knot one end of the binding cord onto the square of net closest to the hook to the left of the ladder or steps. Weave the binding cord in and out of each square of the net around the ladder or steps, until you reach the hook to the right of the ladder or steps. Pull the binding cord as tight as you can, and then tie the binding cord to the square closest to this hook, using a permanent fisherman's knot. Knot the cord 2 or 3 times over. Cut the remaining cord off with a sharp knife or scissors. Use the lighter to seal the two ends of the knotted cord so it will not unravel.

Use the remaining binding cord to double reinforce the bound edge of the net. Once again, tie the cord to the square closest to the hook to the left of the ladder or steps. Weave the binding cord into the next square, and knot the cord to the net. Continue to weave the cord into each successive square as described above, however this time you will knot the cord to each square. Make sure you pull the cord tightly before each knot. To finish, knot the binding cord to the square closest to the hook to the right of the ladder or steps. Cut off any remaining binding cord. Use the lighter to seal any cut edges of cord.

Follow step (8) above to tighten the tensioning system on the center of the pool.

FOR POOLS WITH A PARTIAL DECK:

Follow the instructions above for marking and drilling all unobstructed uprights. Place the net on the pool. Attach all hooks into the corresponding brackets. Any remaining hooks that do not have corresponding uprights due to the partial deck will be anchored directly into the surface of the deck.

Ensure that the central tensioning system is open and loose. Stretch the first loose hook over the deck as far as you can pull it. Mark the spot on the deck where the hook reaches. Drill and attach bracket to the deck. Refer to step (5) above for proper positioning of the bracket. Repeat for any

remaining loose hooks. Each hook should now be attached to a bracket, either on one of the uprights or on the deck.

Follow step (8) above to tighten the tensioning system on the center of the pool.

FOR POOLS WITH A COMPLETE DECK OR FOR ON-GROUND POOLS:

All brackets will be anchored directly into the deck. Pick any spot on the deck, 18” from the pool edge. Mark the spot on the deck. Drill, and attach bracket with provided screw. Refer to step (5) above for proper positioning of the bracket. Place the net over the pool. Ensure that central tensioning system is open and loose. Attach any one of the hooks into the bracket. Walk around to the hook directly opposite the attached hook. Pull the net taut. Mark the spot where the hook reaches. Drill and attach the bracket to this spot. Refer to step (5) above for proper positioning of the bracket. Clip the hook into the bracket you just attached. The next hooks you will attach are the ones directly in between the 2 hooks that are already attached. Once again, pull the net taut. Mark, drill and attach the bracket. Refer to step (5) above for proper positioning of the bracket. Clip the hook into the bracket. You should now have the opposing hooks attached on each side. Proceed around the pool, repeating the above steps until each hook is clipped into its corresponding bracket.

Follow step (8) above to tighten the tensioning system on the center of the pool.

WARNING!
THERE IS NO SUBSTITUTE FOR
COMPETENT ADULT SUPERVISION
IN A SWIMMING POOL
ENVIRONMENT! NO POOL SAFETY
PRODUCT IS A GUARANTEE
AGAINST UNAUTHORIZED ACCESS
TO A POOL.

Water Warden™ Pool Net
Five Year Limited Warranty/One Year Full

1. The Manufacturer warrants that the Water Warden™ Safety Net is free from defects in workmanship and materials for a period of five (5) years.
2. This warranty extends to the original purchaser of the Water Warden™ Safety Net.
3. This warranty covers netting fabric, components and hardware but does not cover incidental or consequential damages, metal finishes or installation of the Water Warden™ Safety Net. Installation is warranted by the installer only, and only to the extent of express warranties provided by the installer.
4. In the event of a defect or other failure of the Water Warden™ Safety Net not caused by any misuse, abuse, neglect, improper maintenance or damage to the Water Warden™ Safety Net while in possession of consumer, manufacturer will remedy the failure or defect, without charge to the consumer. The remedy will consist of repair or replacement of the product, at the warrantor’s option. Warrantor may choose to provide a consumer repair kit at warrantor’s discretion.
5. If manufacturer is unable to provide replacement or repair, a refund will apply as follows: manufacturer will refund what is unserviceable during the first year; after the first year the Water Warden™ Safety Net will

be refunded at a rate of 1/84 of MSRP for each month remaining of the 84 months from the original purchase date.

- 6. If the Water Warden™ Safety Net is reported to be unserviceable, the Water Warden™ Safety Net must be made available to manufacturer's representative to determine its serviceability.
- 7. We reserve the right to inspect the Water Warden™ Safety Net for any claim against this warranty, to determine the cause of failure or loss of serviceability.

CUSTOMER HAS THE SOLE RESPONSIBILITY FOR PERIODICALLY INSPECTING PRODUCT AND REPORTING DEFECTS OR FAILURES. THIS WARRANTY SHALL NOT APPLY TO ANY ITEM WHICH HAS BEEN IMPROPERLY ASSEMBLED, INSTALLED, USED, STORED, OR MAINTAINED. THIS WARRANTY SHALL NOT APPLY TO ANY ITEM WHICH HAS BEEN REPAIRED OR SERVICED BY ANY OTHER THAN A CERTIFIED REPRESENTATIVE OF THE MANUFACTURER. THIS WARRANTY SHALL NOT APPLY TO ANY ITEM WHICH HAS BEEN SUBJECTED TO EXTERNAL SOURCES OF HEAT SUCH AS, BUT NOT LIMITED TO, POOL HEATERS, COOKING DEVICES OR OPEN FLAMES. THIS WARRANTY SHALL NOT APPLY TO ANY ITEM THAT HAS BEEN SUBJECTED TO MISUSE, ACCIDENTS OR ACTS OF GOD. MANUFACTURER DOES NOT WANT TO CREATE A FALSE SENSE OF SECURITY. THE WATER POOL NET IS NOT INTENDED TO BE A SUBSTITUTE FOR PROPER ADULT SUPERVISION NOT IS IT A GUARANTEE AGAINST ACCESS TO THE POOL.

To file a claim:

Please call 1-877-402-SAFE (7233)
Monday – Friday
8:00 AM – 5:00 PM Eastern Time

Please allow 2-4 weeks for
warranty claims to be processed.

Water Warden™ Pool Net
Five Year Limited Warranty/One Year Full

Register your warranty at www.thewaterwarden.com or return this completed warranty registration and copy of purchase receipt, within ten days of purchase to:

Water Warden™ Pool Safety Products
4837 NE 12th Ave,
Oakland Park FL 33334

Purchaser's Name: (please print) _____ Purchase Date: _____
Address: _____
Phone Number: _____ Size of Pool: _____
Dealer's Name: _____
Dealer's Address: _____
Dealer's Phone Number: _____ Dealer's Email: _____
Purchaser's Signature: _____